

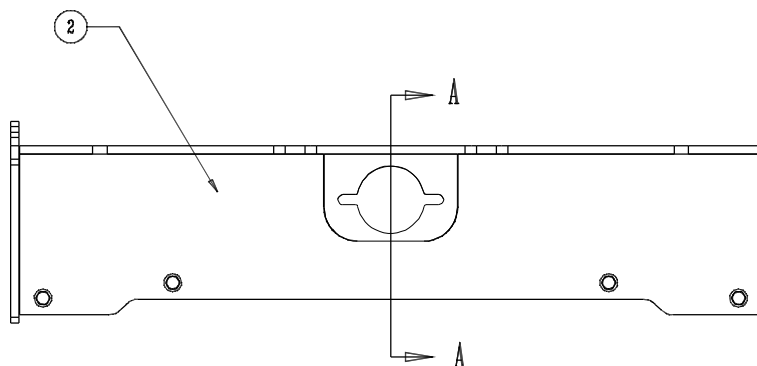
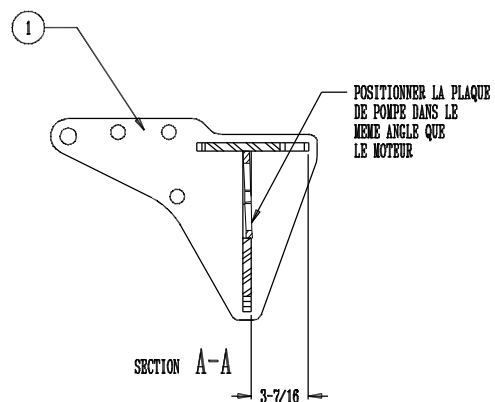
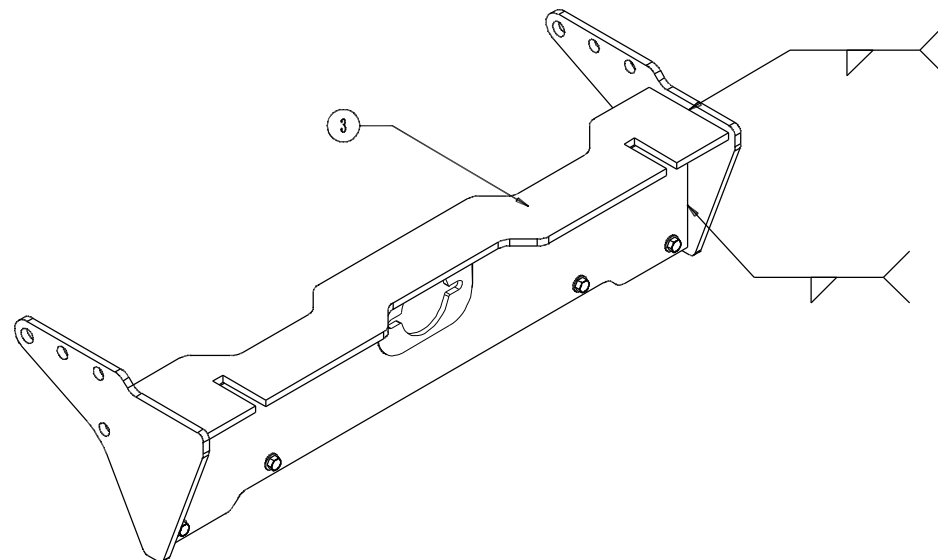
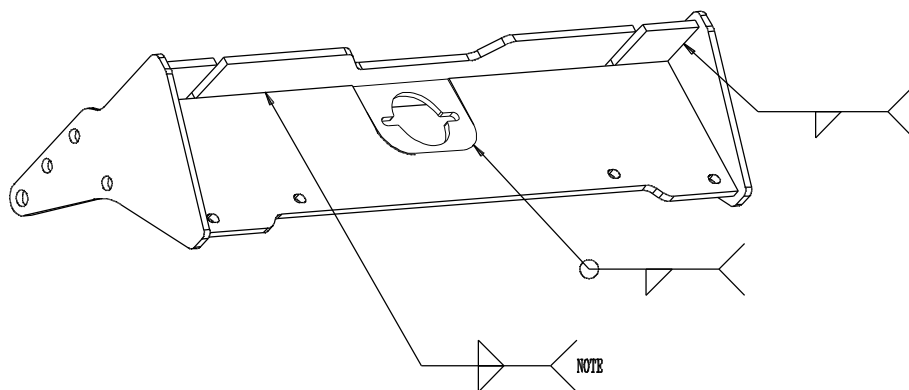
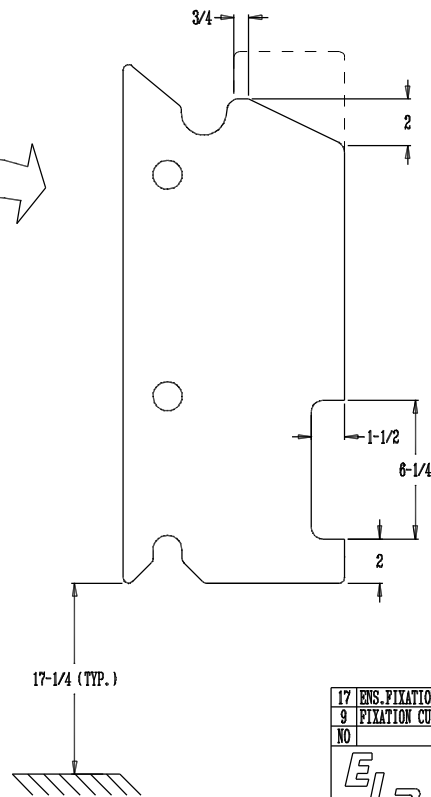
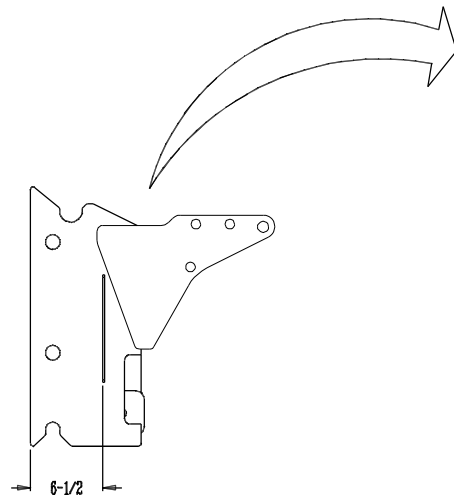
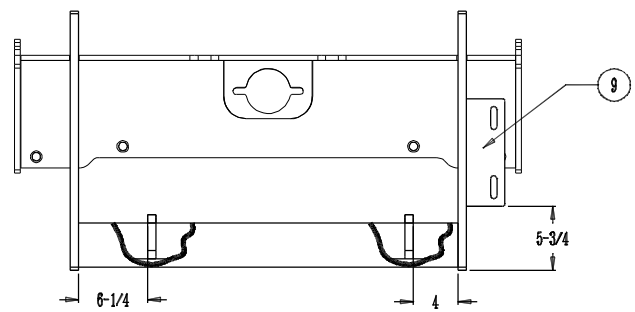


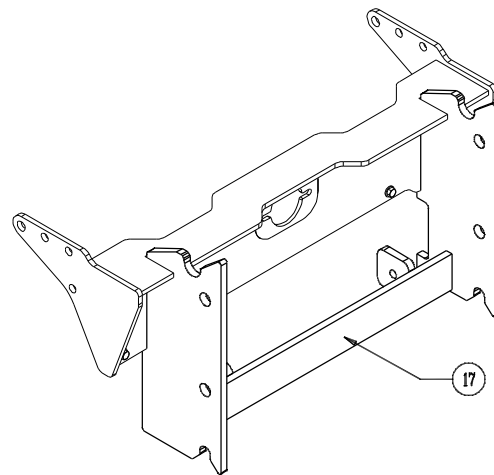





NOTE : -PRE-ASSEMBLER ET SOUDER LES PIECES
1 ET 3
-ASSEMBLER LE RESTE DES COMPOSANTES
SUR LE VEHICULE

3	CEINTURE TRANSVERSALE / TRANSVERSAL BELT	1	NEI-102-04
2	PLAQUE TRANSVERSALE / TRANSVERSAL PLATE	1	NEI-102-03
1	PLAQUE FIXATION COTE / SIDE FIXATION PLATE	2	NEI-102-02
NO	DESCRIPTION	NB	NO
TITRE: FIXATION AVANT CAMION / TRUCK FRONT FIXATION ELP TEL. (819) 983-5000 FAX (819) 983-5555			
QTE	NO: NEI-102-01M1	DATE: 08/09/06	
QTY	CONCEPTION: ML	DESSINE PAR: DHM	TYPE: STRUCTURE


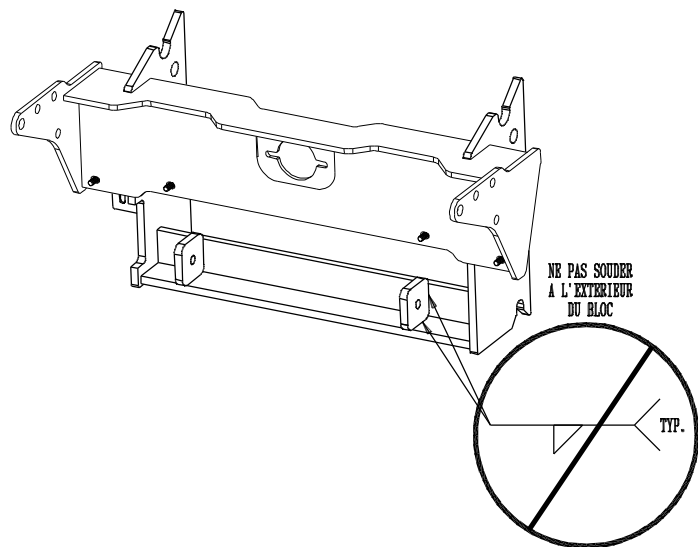


SOUDURE COMPLETE

17	ENS. FIXATION HARNAIS AVANT SERIE 2M3-FRONT HARNESS	1	NEI-073-02E
9	FIXATION CUPPLER / CUPPLER FIXATION	1	NEI-102-16
NO	DESCRIPTION	NB	NO
ELP TYPE: FIXATION AVANT CAMION / TRUCK FRONT FIXATION NO: NEI-102-01M2 DATE: 11/09/06 CONCEPTION: ML DESSIN PAR: DHM TYPE: STRUCTURE			
TEL. (819) 983-5000 FAX. (819) 983-5555			

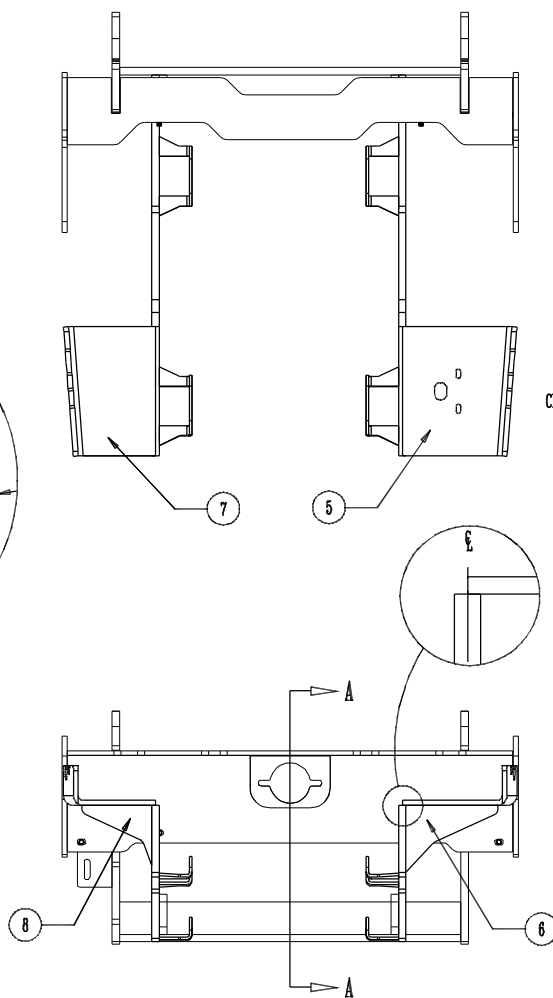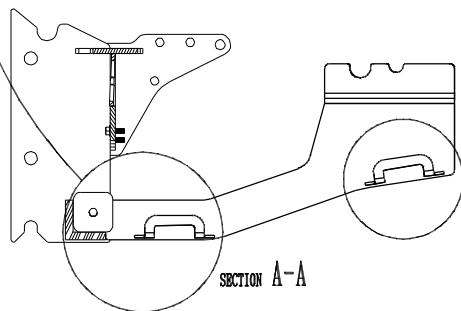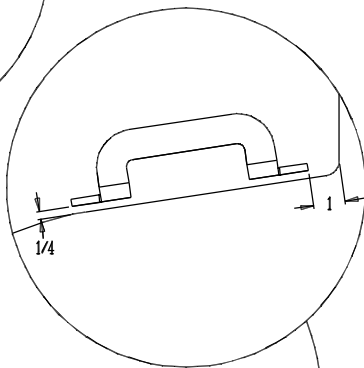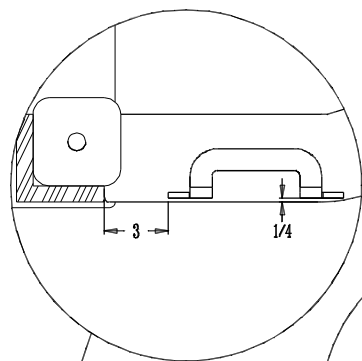

PERCER LES
F.A. ET LE
CHASSIS Ø 9/16

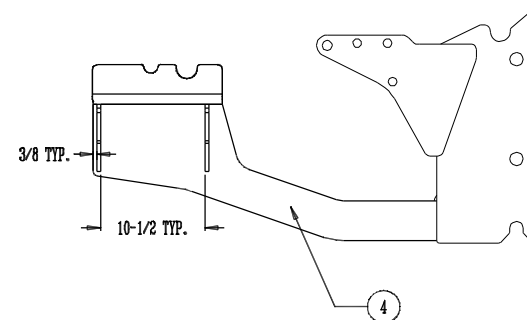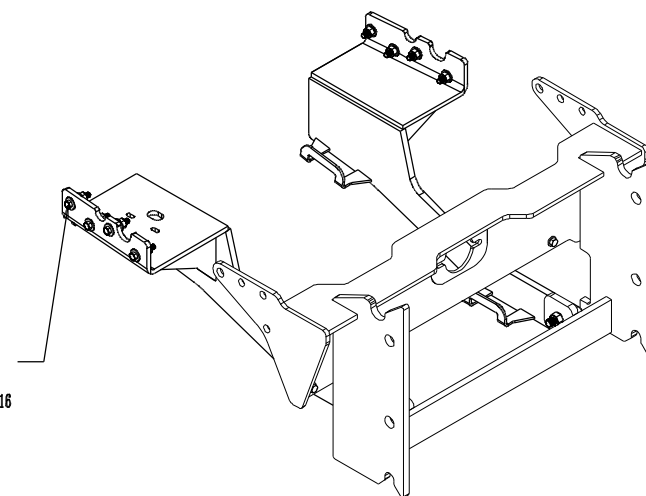

8	GOUSSET GAUCHE / LEFT GUSSET	2	NE1-102-09
7	FER ANGLE CHASSIS GAUCHE / LEFT FRAME IRON ANGLE	1	NE1-102-08
6	GOUSSET DROIT / RIGHT GUSSET	2	NE1-102-07
5	FER ANGLE CHASSIS DROIT / RIGHT FRAME IRON ANGLE	1	NE1-102-06
4	PLAQUE DE POUSSE / PUSH PLATE	2	NE1-102-05
NO	DESCRIPTION	NB	NO



TITRE: FIXATION AVANT CAMION / TRUCK FRONT FIXATION

QTE
QTY

NO: NE1-102-01M3

DATE: 11/09/06

CONCEPTION: ML

DESSIN PAR: DHM

TYPE: STRUCTURE

SOUDURE COMPLETE